

| GreensWagon® Operating Instructions | |
|--|--|
| SET-UP | Remove GreensWagon from crate. Remove drawbar and drawbar packaging from the GreensWagon frame. Attach the drawbar to the GreensWagon using the supplied hardware. The drawbar is designed to be adjustable, do not fully tighten the two bolts at the frame of the GreensWagon. Grease wheel bushings. Attach the two axle supports (bolted to shipping crate) with the carriage bolts provided. Axle supports can be moved in or out to accommodate varying mower widths. Attach the mower bracket to the greens mower using the pictorial direction sheet provided. |
| ADJUSTMENT | Attach the drawbar to the hitch of the tow vehicle. Loosen the nut on the curved piece of the drawbar. Move the deck of the GreensWagon to the level position and tighten the nut on the curve piece of the drawbar. This adjustment allows you to keep the deck of the GreensWagon level with varying hitch heights of different tow vehicles. |
| MAINTENANCE | The GreensWagon requires very little maintenance or upkeep. Simply grease wheel bearings at regular intervals. |